




# **End of Range Multimedia Display Assembly Instructions**

ASSEMBLY INSTRUCTIONS


**STEP 1** Connect each of 2 Lower Support Rods (Part 3) to inside of each side panel (Part 1 & 2) with 2 bolts (Part 7) in positions as shown. ONLY thread each bolt to hand tight.

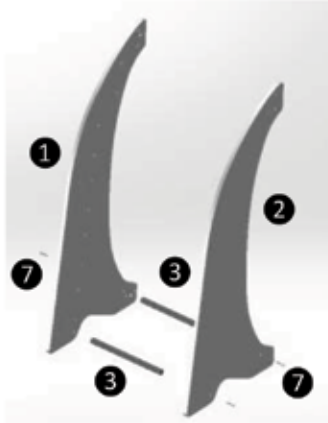


**STEP 2** Connect the Upper Support Rods (Part 4) to inside of each side panel (Part 1 & 2) with 2 bolts (Part 7) in position as shown. ONLY thread each bolt to hand tight. The Upper Support Rod has two holes on one side. Align Upper Support Rod so that the holes are facing upward.



**STEP 3** Connect the Sign Support Rod (Part 5) to inside of each side panel (Part 1 & 2) with 2 bolts (Part 7) in position as shown. ONLY thread each bolt to hand tight. The Sign Support Rod has two holes on two sides. Align the Sign Support Rod so that the holes run vertically.

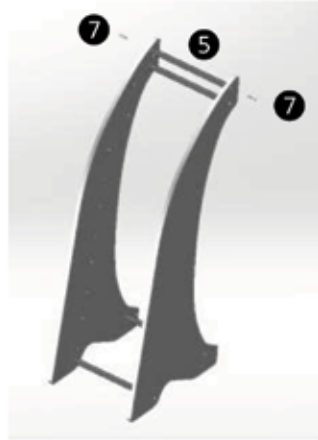

**STEP 4** Connect each of 4 Shelves (Part 6) to inside of each side panel (Part 1 & 2) with 4 Shelf Bolts (Part 8) in position as shown. ONLY thread each bolt to hand tight.

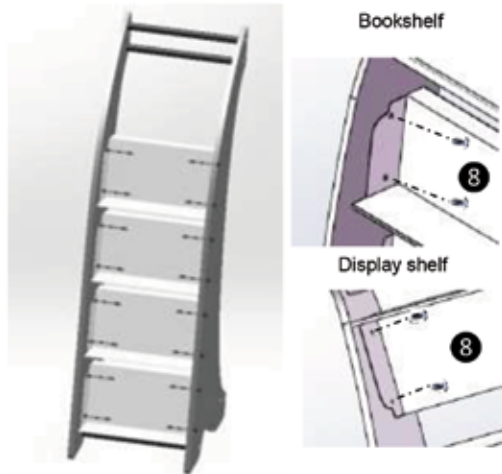


Shelves can be rotated to mount in two different positions. To mount as a Bookshelf, position the Shelf holes so that they are visible from the front of the display. To mount as a Display Shelf, position the Shelf holes so that they are visible from the back of the display.

**STEP 5** Connect top Shelf (Part 6) to inside of each side panel (Part 1 & 2) with 4 Shelf Bolts (Part 8). ONLY thread each bolt to hand tight.





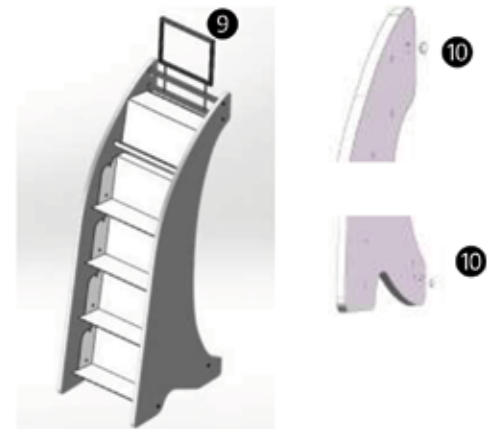









**STEP 6** Insert the Sign Frame (Part 9) through both sets of holes of Sign Support Rod (Part 5) and into the holes of the Upper Support Rod (Part 4) in position as shown. If you are not connecting two units together, insert Cover Caps (Part 10) in holes on side panels.



**STEP 7** With unit fully assembled, fully tighten all bolts (Part 7 and 8) on left and right side using the hex wrench.


ASSEMBLY INSTRUCTIONS

**PARTS LIST**


	Description	Quantity	Image
1	Left panel	1	
2	Right panel	1	
3	Lower Support Rods	2	
4	Upper Support Rod	1	
5	Sign Support Rod	1	
6	Shelf	4	
7	Bolt	8	
8	Shelf Bolt	16	
9	Sign Frame	1	
10	Cover Cap	4	
Parts required for connecting two units. Must retain this hardware if purchasing a second unit at a later date.			
11	Cam Post	2	
12	Cam Insert	4	

**INSTRUCTIONS TO CONNECT TWO DISPLAYS  
(CREATE DOUBLE SIDED DISPLAY)**

**IMPORTANT NOTE:**  
REMOVE OPTIONAL  
CASTERS IF CONNECTING  
TWO DISPLAYS

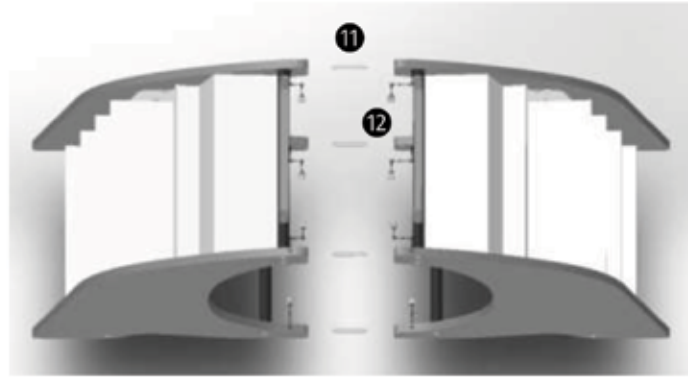

With units fully assembled, insert the Cam Inserts (Part 12) into the holes on the side panels as shown. Align each insert so that the opening is visible through the hole on the back of the panels. Insert each end of the Cam Post (Part 11) through the hole on the back of the panels. Turn the Cam Insert to secure the Cam Post using a screw driver.

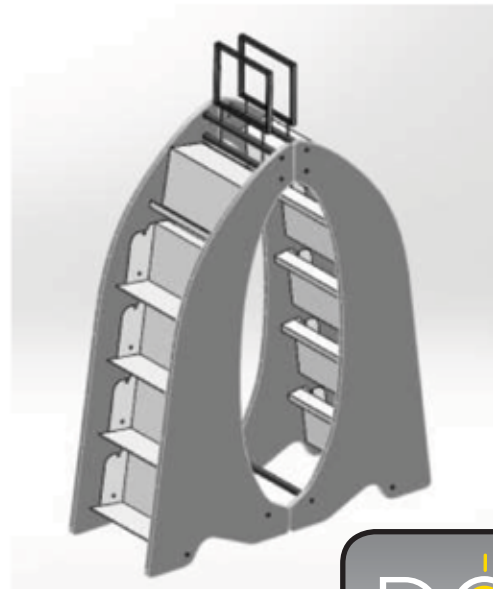



imagine what's possible™

Find End of Range Multimedia Display @demco.com  
Search: 1377171

Call 800.962.4463 or email custserv@demco.com