


Tips: Calibration

1



Hold down the power button on Ozobot for 2 seconds until the LED light turns white.

2

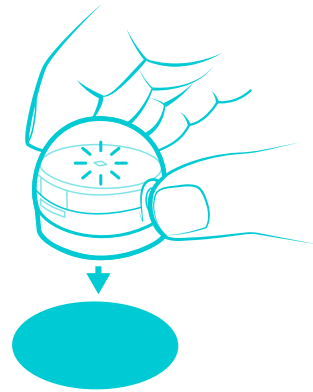


Quickly Place Ozobot in the middle of the black calibration dot.

3



Ozobot will move forward and blink green, which means it has successfully calibrated. Start over if Ozobot blinks red.

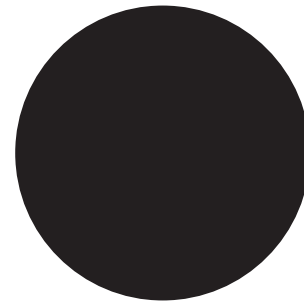

Use this black dot to calibrate.

Tips: Drawing Lines



X

Too Thin!



X

Too Thick!



X

Inconsistent!




✓

Just Right



X

Too Close!

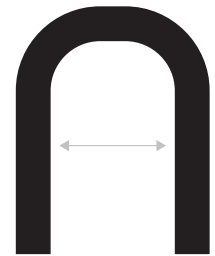

✓

Just Right



X

Too Sharp!



✓

Just Right



✓

Just Right

Tips: Drawing Codes



X
Codes on colored lines



X
Different sizes



X
White spaces



X
Overlapping colors




X
Too dark




✓
Codes on black lines

Tips: General

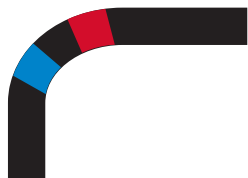


X
No codes on corners!

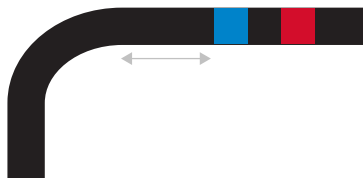

✓
Keep codes on straight lines away from corners



X
Too close!

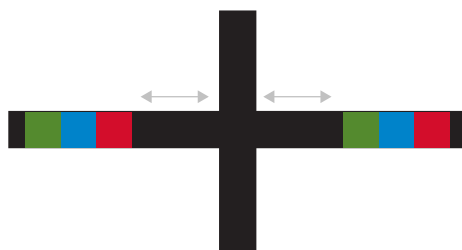

✓
Place codes away from intersections




✓
All other codes need black line before and after



✓
2 color codes need to be at line end

Tips: OzoDraw


Before playing on a tablet or smartphone, you need to calibrate to the digital screen. Follow the calibration instructions in the "Ozobot Tuneup" section of our apps.

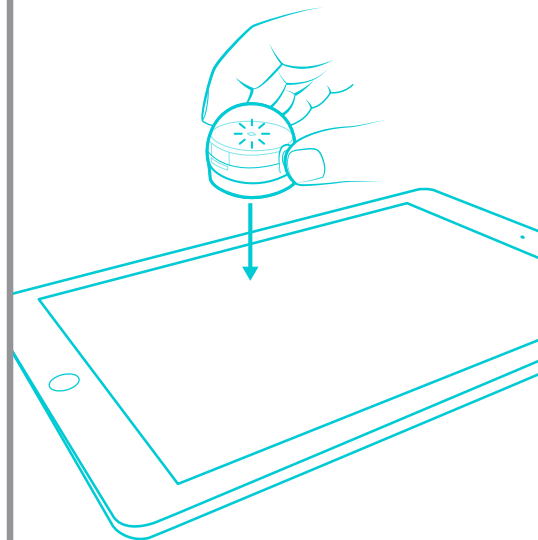


Flash Codes




Two-finger touch to rotate

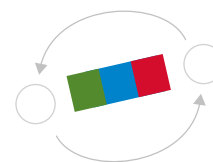

✓
Flash Codes will work on colored lines

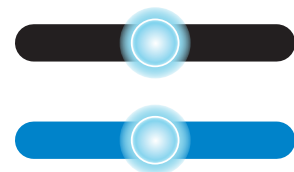

X
Not aligned to path

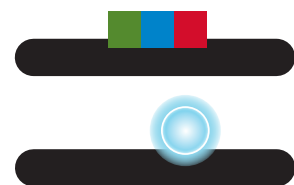

To delete code, tap and drag code off screen

